

Important Safety Precautions

These safeguards are general guidelines. When using any electrical appliance basic safety precautions should always be followed including the following:

- Read and follow all instructions and follow all recommendations and precautions.
- Use the dough mat only for it's intended purposes.
- To protect from electrical shock, do not immerse cord, plugs, thermostat, or connector housing in water or other liquid.
- Unplug when not in use and before cleaning.
- Plug the dough mat directly into the wall, do not use an extension cord.
- DO NOT use chemical or abrasive cleaners or polishers.
- DO NOT put the dough mat under running water or submerge in water.
- The dough mat is NOT dishwasher safe, DO NOT place in dishwasher.
- DO NOT place in the microwave.
- DO NOT place near or on a heat source.
- DO NOT place objects on the mat other than what is intended to be placed on the dough mat.
- DO NOT cut on or use any sharp objects near the dough mat.
- Supervise the dough mat when in use.
- DO NOT attempt to modify or repair the dough mat, please contact customer service for repairs or replacement.
- DO NOT operate if there are any defects or malfunctions to any part of the dough mat.
- Keep cord away from high traffic areas or from hanging off of the counter to avoid injury.